



 
GE Smart Shades Installation Guide

Getting Started



Determine Install Type

Choose whether the shade will mount inside or outside the window trim, and complete the installation.

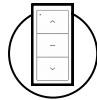

Set Shade Limits

Use the provided remote to set the travel of the shade to your window height.




Set Up Optional Features

Group multiple shades, create favorite shade positions and configure Smart Assistants to work with your Smart Shade.

Let's Do It

Included:

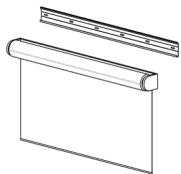

Cut-to-size Smart Shade and mounting plate



Pre-programmed 1-channel remote



Programming Key



Magnetic charger

What You'll Need:



Painter's tape



Pencil



Level



Philips screwdriver



Drill with 1/8" and 3/16" bit



(3) 1 5/8" Modified truss head screws



(3) 3/4" Modified truss head screws



(3) Drywall anchors



(3) Washers



(5) U-shims



Stud finder



Hammer



Measuring Tape




Before You Begin

- Read all instructions completely and carefully.
- Measure installation location to ensure fit.
- Ensure all components are included.


For set up help, visit
shadesupport.gelighting.com
or call 1-844-302-2943.

Get To Know Your Smart Shade

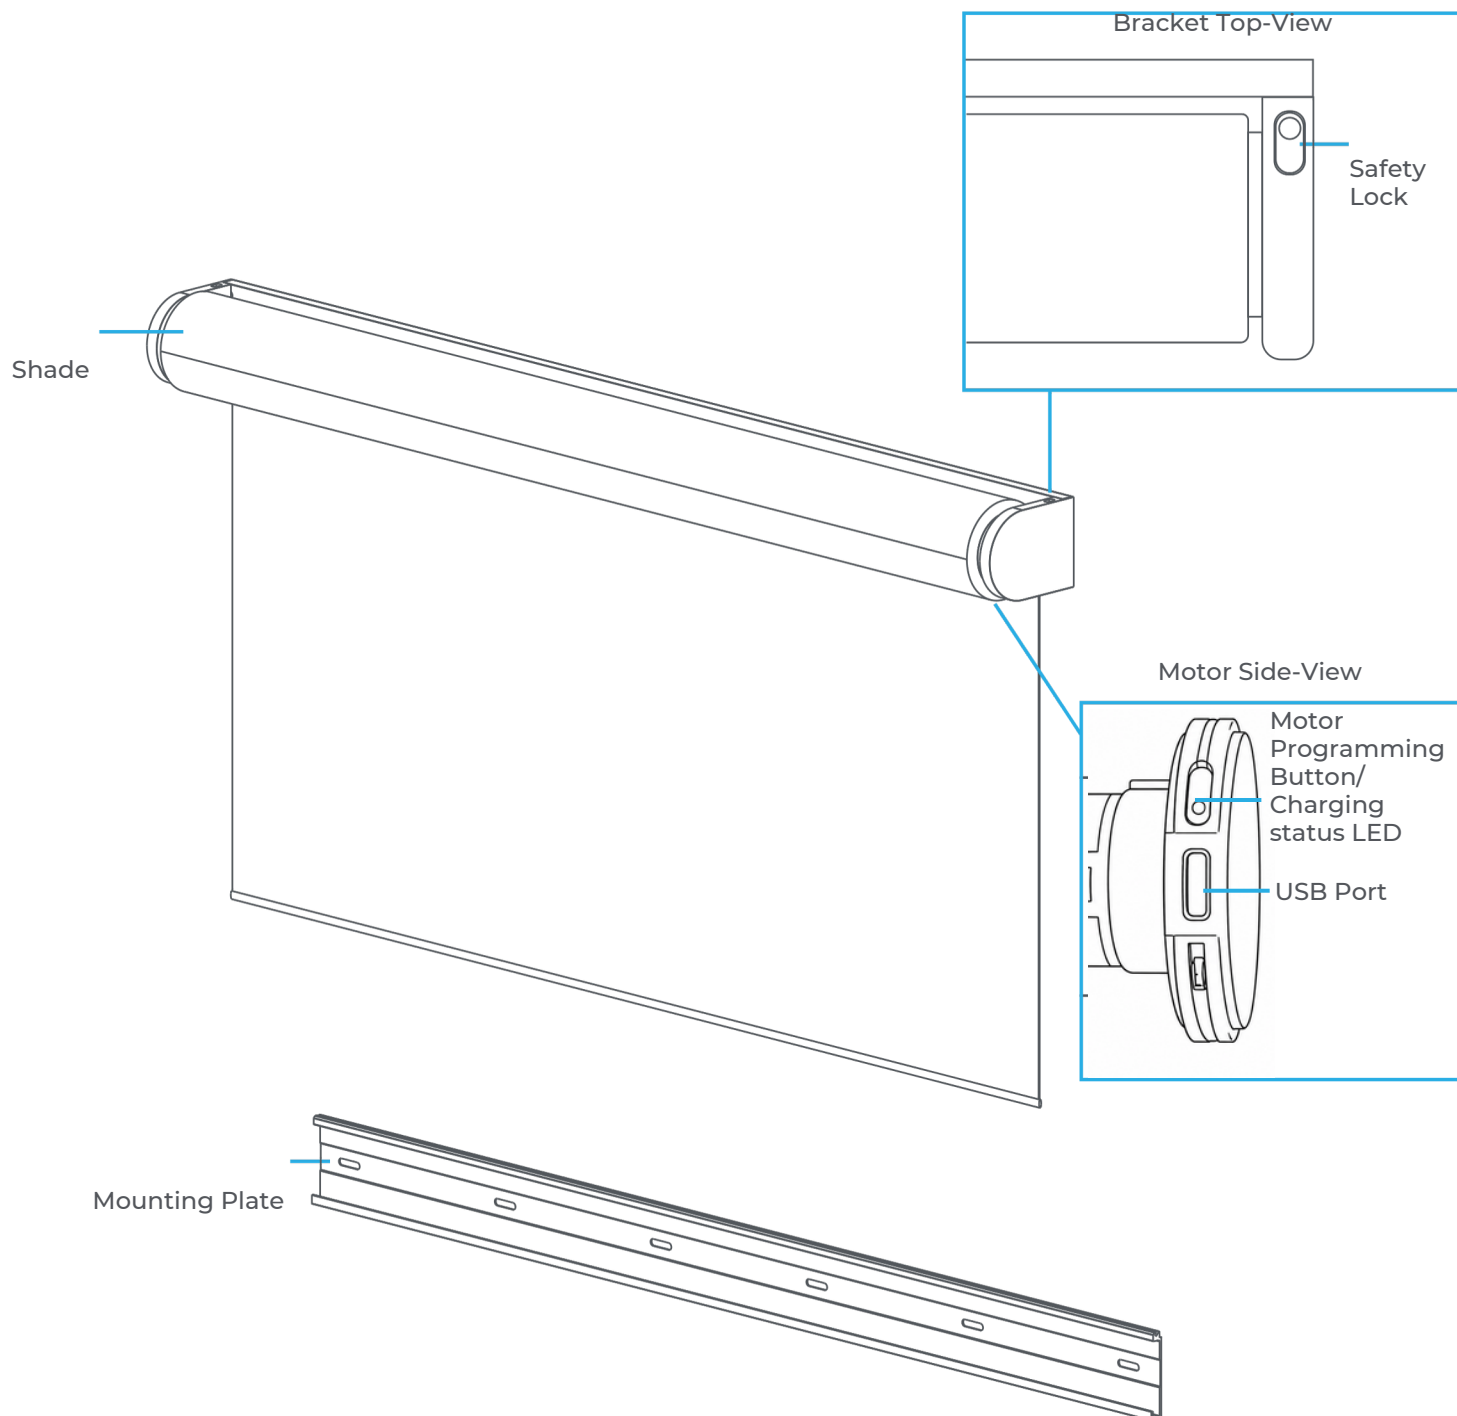


Prepare Installation Area


1. Determine shade location. GE Smart Shades can be placed above a window, on the window frame, inside the window trim, or on the ceiling.

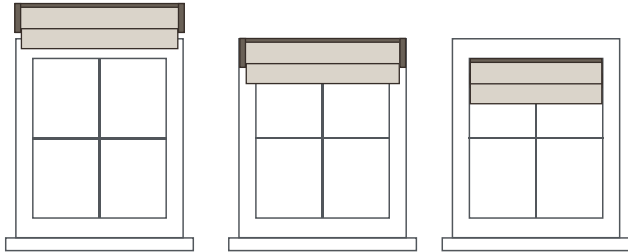

2. Apply a piece of painter's tape to the wall or trim centered above the window where the shade is to be mounted. For inside mounted Smart Shades, align the shade with the front of the window frame to avoid potential obstructions. Using a measuring tape, find the center point above the window and mark it on the tape.

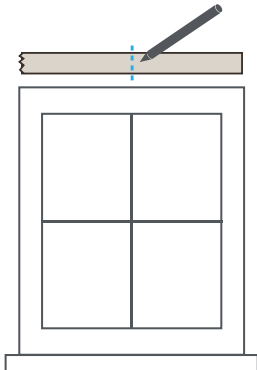

3. Remove the mounting plate from the Smart Shade by sliding both safety locks towards front of the shade and pull apart. Safety locks are located on each of the mounting brackets.

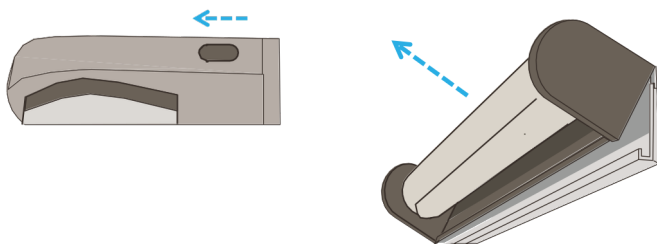


IMPORTANT NOTE

If connecting your GE Smart Shade to a smart assistant, go to **PAGE 6 / SMART ASSISTANT SETUP** and set up your shade in the app **prior** to mounting the Smart Shade.

Mark and Drill Pilot Holes

1. Align the center hole of the mounting plate and with the center mark of the window. Use a level to ensure the mounting plate runs parallel with the floor.

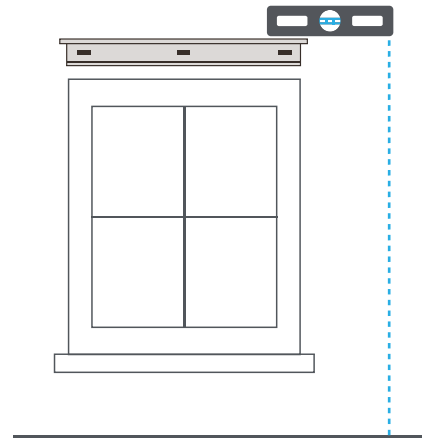


2. Mark the three hole locations with a pencil then set the mounting plate aside.



3. Drill three pilot holes using a drill with a 1/8" bit.


NOTE: For installations on drywall, test for a stud behind the marked center screw location using a stud finder **BEFORE** drilling holes.

⚠️ Ensure there is no electrical wiring, plumbing, or other hidden utilities in the wall before drilling to avoid electric shock or damage.

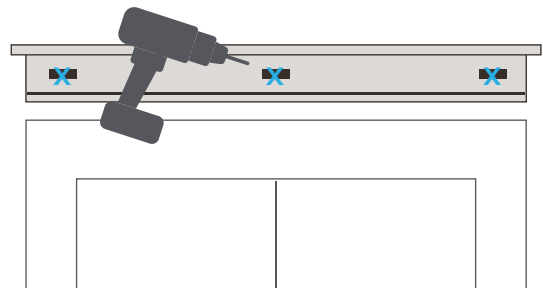

INSTALLATION

4. If you are installing on drywall without a stud, use the 3/16" drill bit to widen pilot holes, then insert a plastic anchor into each pilot hole and screw with a screwdriver until it is flush with the surface.

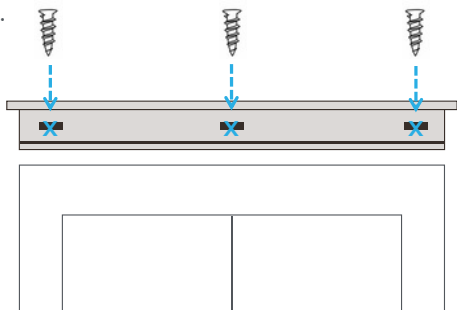


Mount the Plate

1. Align the mounting plate over the holes, ensuring the widest part of the plate is facing up for on-wall or on-trim installations, or closest to the wall or window for ceiling or inside the window applications.
2. Mount the plate with a screw and washer in each hole starting with the center hole location.


Note: Use 1 5/8" modified truss head screws with drywall anchors or if mounting to stud.

Use 3/4" modified truss head screws if mounting directly to wood trim

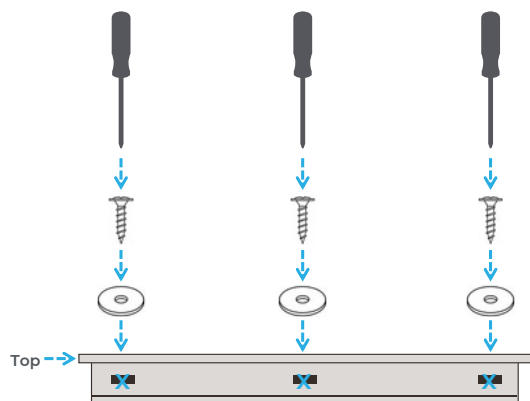

NOTE: DO NOT USE IMPACT DRILL OR POWER DRILL. Hand screw in only.

3. Ensure the mounting plate is level and flush to the wall on both ends. If needed, insert a u-shim behind the screw location to fill any gaps between the plate and the wall.

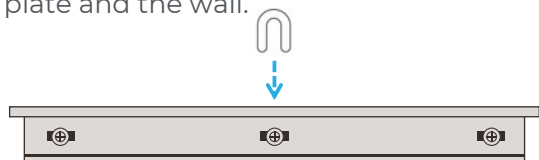

Attach the Smart Shade

1. Prepare to attach the Smart Shade to the mounting plate by holding both ends and pulling back the safety locks. Do not release.




2. Center the shade over the mounting plate so it sits flat to the wall, slightly higher than the plate.


3. Slide the shade downward until it rests snug on both top and bottom lips of the mounting plate.

4. Release safety locks to secure the Smart Shade in place.

For above window and on window trim installs

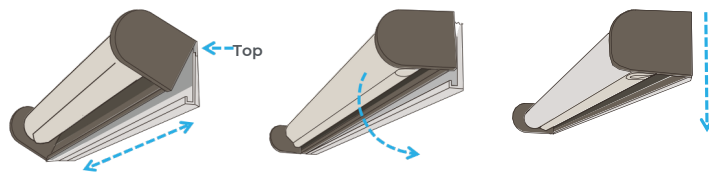

For inside window and ceiling mount installs

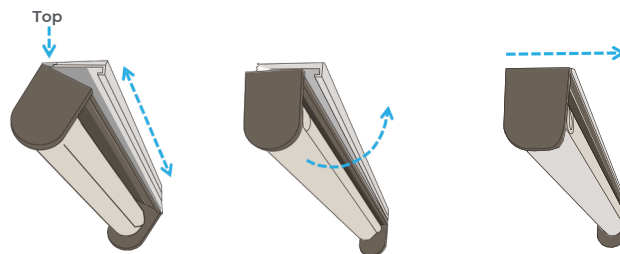

IMPORTANT SAFETY NOTE


Check that both the right and left safety locks are properly secured for safe operation. Unlocked shades could fall and cause damage or harm. If the Smart Shade appears to move during operation, it may not be properly secured.

Setting Shade Limits

Shades are preset to open to 76in. Adjust the shade length to fit your window opening by using the included remote.

IMPORTANT NOTES:

- Your remote is pre-paired with your Smart Shade.
- Remove the plastic tab inside the battery door before using.
- When adjusting shade parameters the Smart Shade will jog as part of the normal operation. Do not proceed to the next step in the procedure until each jog is complete.

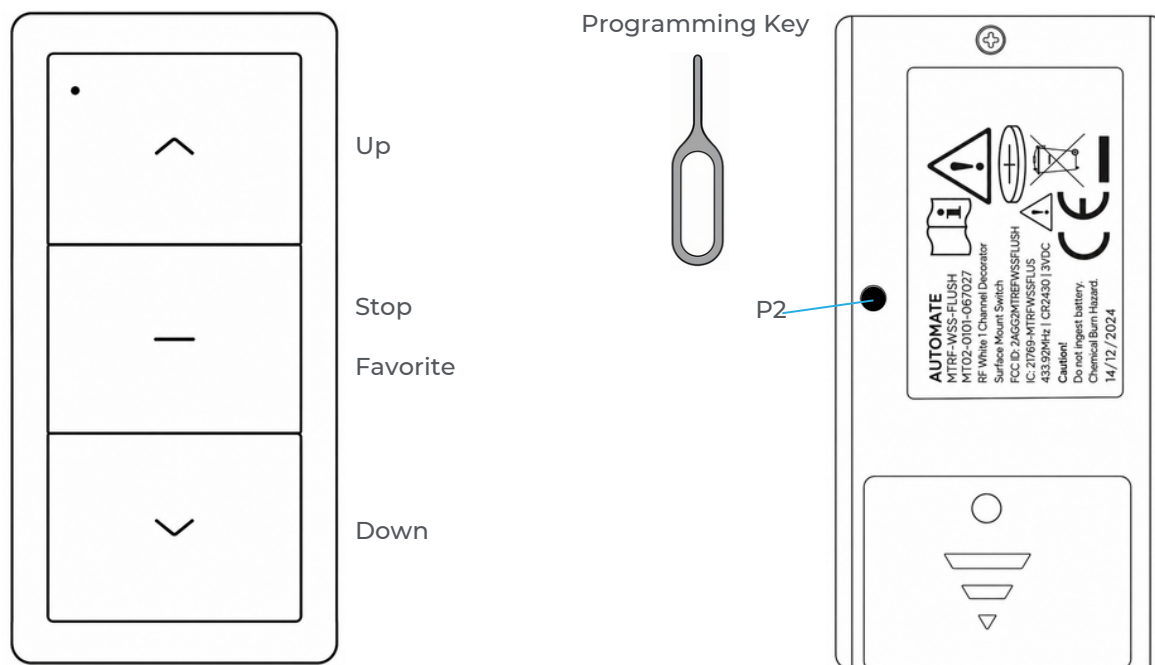

Adjust Lower Limit

1. & Press and hold Down Button + Stop Button for 6 seconds. Shade will jog once and beep to confirm limit adjust mode.
2. or Lower or raise shade to desired position using Down and Up Buttons.
3. & Press and hold Down Button + Stop Button for 2 seconds. Shade will jog twice and beep three times to confirm new limits.

Adjust Upper Limit

1. & Press and hold Up Button + Stop Button for 6 seconds. Shade will jog once and beep to confirm limit adjust mode.
2. or Lower or raise shade to desired position using Down and Up Buttons.
3. & Press and hold Up Button + Stop Button for 2 seconds. Shade will jog twice and beep three times to confirm new limits.

Optional Setup Instructions

Note: Use the provided programming key for procedures that require P2 button

Control Multiple Shades with a Single Remote

1. Press **P2** on the back of the original remote. Shade will jog.
2. Press **P2** on the back of the original remote. Shade will jog again.
3.  Press and hold stop on the new remote. Shade will jog twice to confirm.

Set a Favorite Shade Position

1.  or  Lower or raise shade to desired position using Down and Up Buttons.
2. Press **P2** button. Shade will jog once and beep
3.  Press stop button. Shade will jog once and beep
4.  Press stop button again. Shade will jog twice and beep three times to confirm

Note: Once set, to send shade to favorite position, press and hold the stop button for approximately 2 seconds

Cancel a Favorite Shade Position

1. Press **P2** button. Shade will jog once and beep
2.  Press stop button. Shade will jog once and beep
3.  Press stop button again. Shade will jog once and beep to confirm

Smart Assistant Setup

Control your shade using Apple Home, Amazon Alexa, Google Home or Samsung SmartThings. Pairing your GE smart shade requires connection to aMatter Thread router device and smart assistant app downloaded onto your smart phone.

1. Open your Smart Assistant app - Apple Home, Amazon Alexa, Google Home, or Samsung SmartThings.
2. Follow the new device setup instructions on your Smart Assistant app.
3. Scan the Matter Setup Code located on the motor antenna, then follow the instructions to add to your smart home.


Smart Shade Charging

Your Smart Shade uses a rechargeable battery that should last about 6 months under normal use before needing to be recharged. The motor beeps x10 when in use to indicate charging required

NOTE: Smart Shades will have a partial charge when they arrive and should be charged to full before initial use.

1. Place the magnetic end of the charger on the shade bracket near the USB Port.
2. Plug your USB charger into a nearby outlet or use a portable charger with your cable. Let the shade charge for at least 8 hours.

NOTE: There are no batteries to replace.

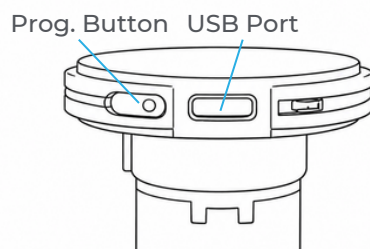


LED Behavior	Status
Green LED flashes while plugged in	Motor is charging
Always On	Fully charged

Replacing Remote Batteries

The remote requires a single CR2430 battery

1. Remove battery door by depressing the door release with paper clip or programming key then sliding the door away from the remote
2. Replace the battery ensuring the negative side is facing down into the remote, and the positive side is facing up
3. Slide battery door back until it is locked in place

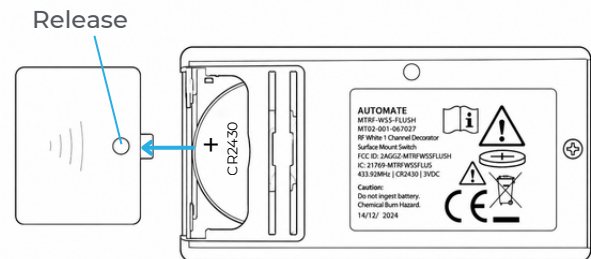

Troubleshooting

Issue	Cause	Solutions
Smart Shade is unresponsive	Remote is inactive	Check battery polarity or replace
	Smart Shade is inactive	Re-pair shade to remote
	Low battery	Recharge battery
Smart shade stops suddenly during normal operation	Limits set incorrectly	Reset upper or lower limits
	Low battery	Recharge battery
Motor beeps 10 times upon starting	Low battery	Recharge battery

Important Notices

Disclaimer

SavantTechnologies, LLC reserves the right to change product specifications without notice, therefore, the information presented herein shall not be construed as a commitment or warranty. Savant Systems, Inc. shall not be liable for any technical or editorial errors or omissions contained herein or for incidental or consequential damages resulting from the performance, furnishing, reliance on, or use of this material.

Patents

Certain equipment and software described in this document is protected by issued and pending U.S. and foreign patents. All products and services are trademarks or registered trademarks of their respective manufacturer.

Trademarks

© 2025 SavantTechnologies, LLC. All rights reserved.
GE is a trademark of General Electric Company. Used under trademark license.
Works with Apple Home logo™ is a trademark of Apple Inc.
Amazon, Alexa and all related logos are trademarks of Amazon.com, Inc. or its affiliates.
Google Android, and Google Home are trademarks of Google LLC.

CAUTION

- This product is for indoor use only, to avoid the risk of electric shock do not use outdoors or in wet environments
- This Smart Shade has a built-in rechargeable Li-ion battery pack with integrated charge management.
- Max input voltage: 5V/2A.
- Please charge Smart Shade before using for the first time, make sure it is fully charged before first use.
- When the battery voltage is low, shade motor will beep x10 give a low-voltage alarm when Smart Shade starts.
- When adjusting shade parameters the Smart Shade will jog as part of the normal operation. Please do not proceed to the next step in the procedure until each jog is complete.
- During operation, the effective interval of the transmitter button operation is 10 seconds. If there is no effective transmitter operation for more than 10 seconds, it will automatically exit the current mode.
- The Smart Shade can be paired with a maximum of 10 remotes.
- Do not use Smart Shade when charging.
- Do not lift the Smart Shade by grabbing the wire or antenna.
- Do not disassemble, open, crush, bend, deform, puncture, or shred the battery in this device.
- Do not modify or remanufacture the battery, attempt to insert foreign objects into the battery, or immerse or expose it to water or other liquids, expose to fire, explosion or other hazard
- Keep batteries out of reach of children.
- Dispose of all batteries in accordance with applicable laws and regulations.

**WARNING**
**INGESTION HAZARD**
THIS PRODUCT CONTAINS A BUTTON CELL OR COIN BATTERY
DEATH or serious injury can occur if ingested
A swallowed button cell or coin battery can cause **Internal Chemical burns** in as little as **2 hours**
KEEP new and used batteries **OUT OF REACH of CHILDREN**
Seek immediate medical attention if a battery is suspected to be swallowed or inserted inside any part of the body.

Symbol meaning: Warning: Contains coin battery
Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
Even used batteries may cause severe injury or death.
Call a local poison control center for treatment information.
Battery Type: CR2430. Nominal Voltage: 3.0 Volts.
Non-rechargeable batteries are not to be recharged.
Do not force discharge, recharge, disassemble, heat above 50°C or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
Ensure the batteries are installed correctly according to polarity (+ and -).
Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

Like your new GE Smart Shades? Share Your Experience!

Leave a review where you purchased the product.

